 


morphy richards®

Steam cleaner with attachments

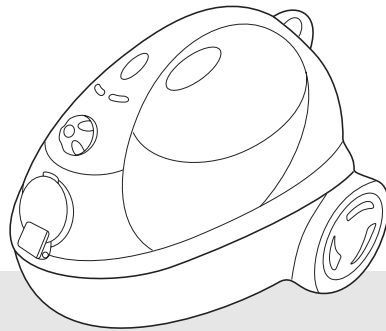

Please read and keep these instructions



getting the best from your
new steam cleaner...

- **Quick start**

- 1 Fill the tank up to a maximum of 1.0 litre of water (using warm water will reduce heat-up time). Screw cap on and tighten fully.
- 2 Attach the required accessories.
- 3 Connect to the power supply.
- 4 Press the on/off button to start heat-up. When orange light turns off, the steam is ready.
- 5 Press the trigger on the handle to release the steam.
- 6 Aim the steam safely: Note at the start water may be ejected. Hold over a sink or bucket until excess water has cleared.

- **Descale**

Descale regularly, do not wait for a problem to occur. In very hard water areas we recommend using distilled water. See page 10 for descaling instructions.



www.morphyrichards.com

Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following safety advice.

Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Personal safety

- The plug must be removed from the wall socket before cleaning, filling the boiler or maintaining the appliance.
- To protect against fire, electric shock and personal injury do not immerse cord, plug or cleaner in water or other liquid.
- Do not discharge the steam towards people. Danger of scalding.
- Never touch the plug or cable with wet hands.
- Never modify the cleaner in any way.
- When using the machine always keep it horizontal.
- Steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

Other safety considerations

- Do not use any chemical detergents, perfumes, alcohol etc in the water.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Morphy Richards using the replacement parts number on the front of this leaflet.
- The appliance must never be left running when unsupervised.
- This steam cleaner is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Electrical requirements

Check that the voltage on the rating plate of your unit corresponds with your house electricity which must be A.C. (alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

 
WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: This appliance must be earthed.

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

When using this appliance outdoors it should be additionally protected by a RCCB (Residual Current Circuit Breaker).

Illustration

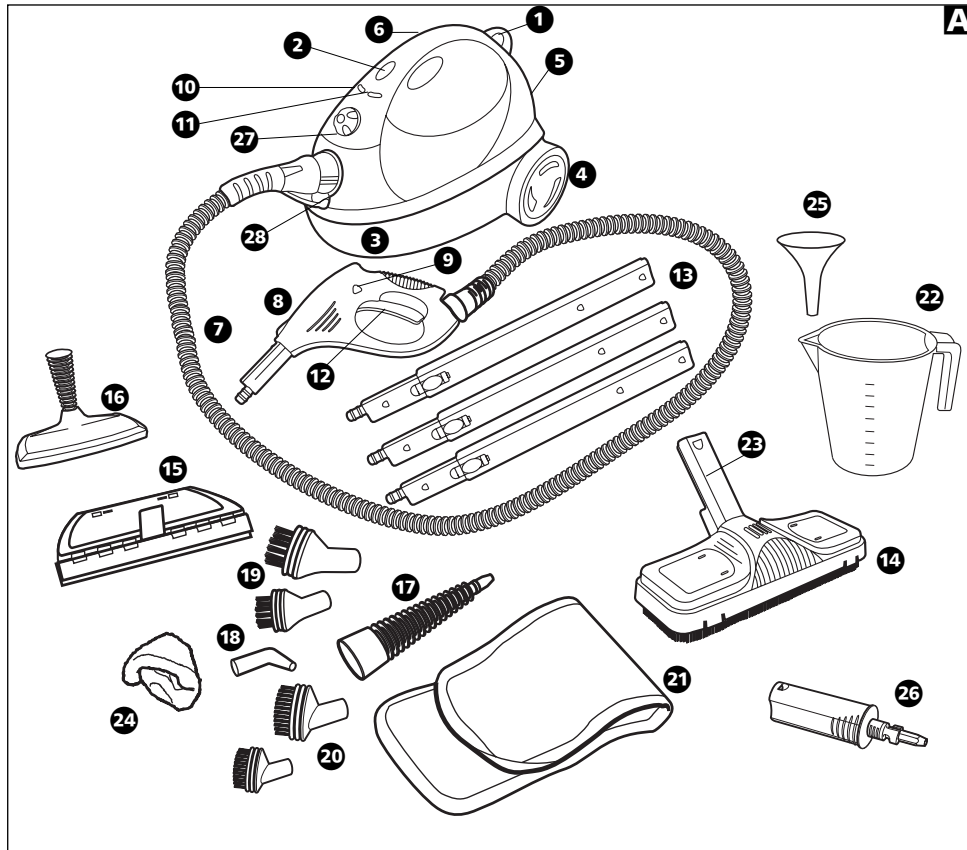

Features

- 1 Filler cap
- 2 On/off switch
- 3 Tool storage cart
- 4 Wheel
- 5 Tube park (see page 9)
- 6 Carrying handle
- 7 Hose
- 8 Hose handle
- 9 Trigger lock button
- 10 Power light
- 11 Steam ready light
- 12 Steam trigger

Accessories you should have

 
- 13 Extension tubes
- 14 Floor nozzle
- 15 Window squeegee attachment
- 16 Upholstery nozzle
- 17 Jet nozzle
- 18 Angled nozzle
- 19 Small & large brush (plastic brush)
- 20 Small & large brush (brass brush)
- 21 Cotton towel

- 22 Measuring jug
- 23 Elbow attachment (shown attached to floor nozzle)
- 24 Cloth cap for upholstery nozzle
- 25 Funnel
- 26 Jet nozzle adaptor
- 27 Steam adjust knob
- 28 Hose inlet

NB

Most accessories are in the storage cart beneath the main body.


Accessory assembly

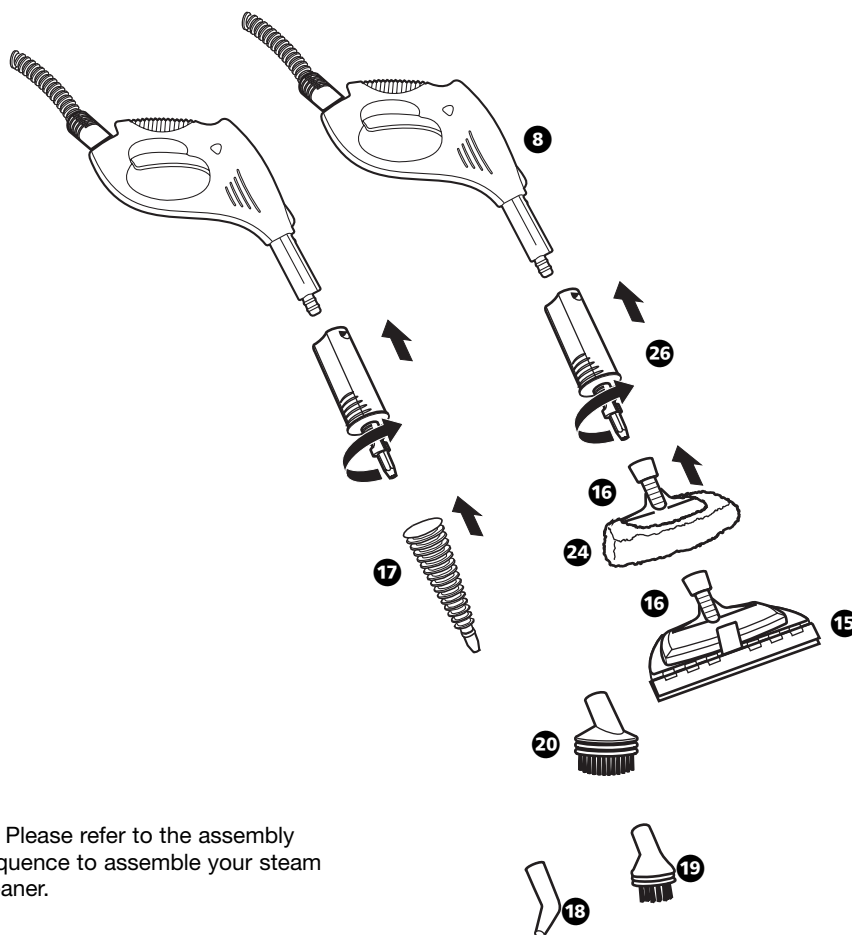

Please refer to the assembly sequence to assemble your steam cleaner.

Fitting the hose

 - 1 Pull the flap down at the front of the cleaner, line up the locating keyway on the plug with the socket and push the hose connector firmly and fully into the cleaner socket.

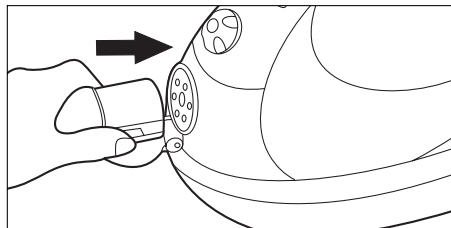

Operation

 
Please remember that the steam cleaner operates by emitting steam at an increased temperature of 130°C. Never use it on objects or surfaces which cannot resist this temperature, delicate materials, dralon, plastic, natural fur etc. Where any doubt exists check carefully on a part of the material where minor marks will not matter.

WARNING: Always switch off, unplug and release all steam using the steam trigger before opening and removing the filler cap.

Storage cart removal

The cleaner may be used with or without the storage cart.


- 1 Press the button at the rear of the cleaner and lift to remove the boiler from the cart.

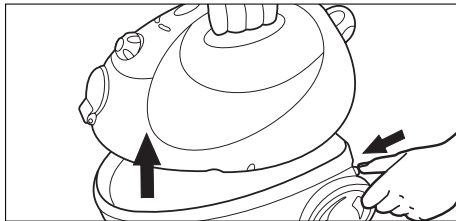

Filling the boiler

Ensure steamer is unplugged from the socket before filling or re-filling.

 - 1 **Unscrew the filler cap ① by pressing down and turning anti-clockwise.**

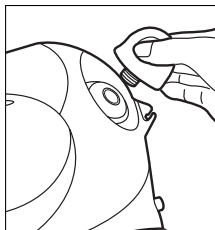

- 2 **Fill the boiler with a maximum of 1.0 litres of water by using the jug provided and funnel. Warm water may be used which will reduce heat up time. Do not use any detergent.**

- 3 **Refit the filler cap and fully tighten by pressing down and turning clockwise.**

WARNING: The filler cap must never be opened during use.

 
WARNING: The use of any other fluids can be dangerous and can lead to damage of the heating element.

IMPORTANT: The water tank should be emptied after use. Allow to cool before emptying. Leave the water tank to dry out before replacing the cap.

Re-filling the boiler

WARNING: Always switch off, unplug and release all steam using the steam trigger before opening and removing the filler cap.

- 1 Before opening the filler cap to refill the tank, release the steam pressure by pressing the steam trigger ② on the handle. Press until all the steam has been expelled from the tank, leave the


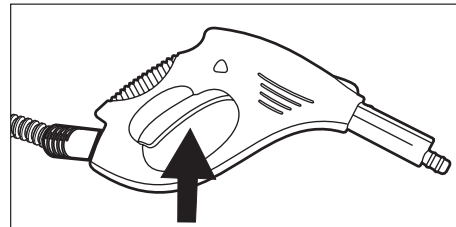


- cleaner to cool down for a few minutes.
- 2 Follow 'filling boiler instructions' to refill.

WARNING: Use warm water to reduce the risk of spitting.

On/off switch

  - 1 When the water tank has been filled, 'see filling the boiler,' insert the plug into the power socket.
- 2 Switch the cleaner on by pressing the on/off switch to 'on'. The power indicator light (red) and the steam ready light (orange) will illuminate.

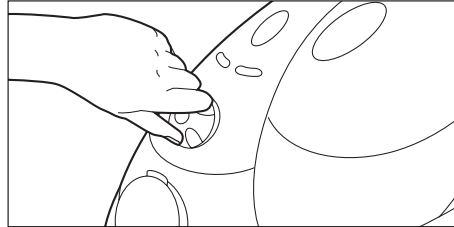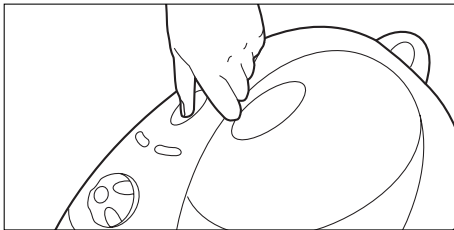


Steam Trigger

WARNING: At the start water may be ejected. Aim the steam safely. Start by releasing the steam into a bucket or sink.

The cleaner is now ready for use when the orange steam ready light goes out.

 - 1 Ensure the safety lock is off. Push the lock from the left side to lock the trigger and push from the right to release the lock.
- 2 When you press the steam trigger, steam will be emitted from the nozzle. Direct the steam handle at a cloth first until the steam is emitted evenly.

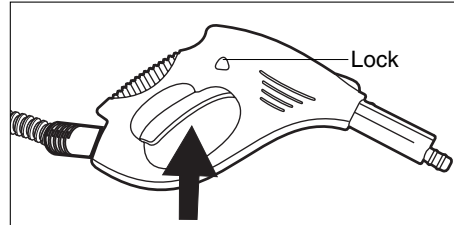

Steam ready display

- 1 The steam ready light (orange) will illuminate when switched on. It will take approximately 7 minutes to reach temperature.
- 2 When the correct temperature has been reached the steam ready light (orange) will go out. The steam cleaner is now ready to use.

Note: The steam ready light will go on and off during use. This is to keep the steam at the correct temperature.

WARNING: To avoid injury, the cleaner should be switched off during breaks or pauses of work. For extra safety apply the trigger safety lock.

If you leave the working area, please switch the cleaner off and unplug.

Steam adjust

The knob at the front of the cleaner controls the steam output. Turn the knob fully anti-clockwise for the maximum amount of steam. Turn the knob clockwise for decreasing amounts of steam.

- 3 Keep the steam trigger pressed and direct the steam at the surface to be cleaned, removing the dirt by moving the steam jet backwards and forwards over the area.
- 4 To stop the steam jet, release the steam trigger.

WARNING: Do not hold the steam jet concentrated in one place for too long.

 
- To control the steam temperature and the cleaning power move the handle closer to or further away from the surface to be cleaned.

Attaching tubes & handle

WARNING: Unplug the unit and allow to cool before fitting or changing attachments as they become hot during use.


Attach the desired accessory to the hose handle **8**, extension tubes can be attached to the handle for extra reach.

- 1 Push the extension tubes **13** onto the connection nozzle as far as it will go until you hear a click.

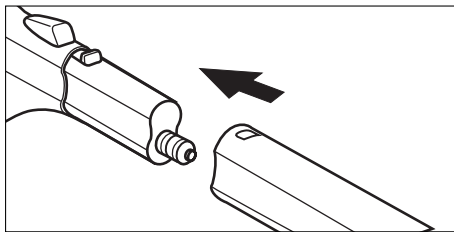


Some tasks may be easier with only one, tube fitted or non at all.

 
- 2 To connect the desired accessory directly to the steam handle, slide the handle into the accessory head or tube until it locks in place.

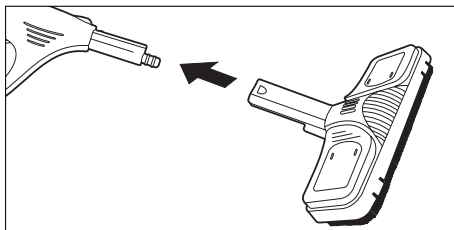

 
- 1 Fit the elbow attachment **23** to the floor nozzle **14** and twist $\frac{1}{2}$ a turn.

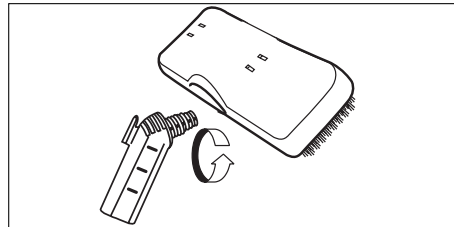

 - 2 Fit the floor nozzle to the extension tube or handle.

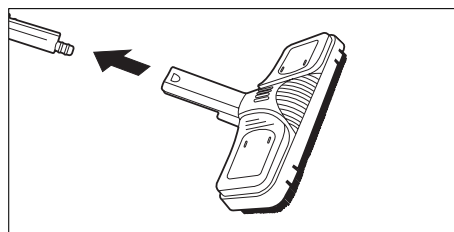

 - 3 To fit the cloth **21** to the floor nozzle pull the cloth under the clips on both sides. Extra cloths can be ordered by using our helpline. Alternatively any strong, uncoloured cotton cloths may be used.

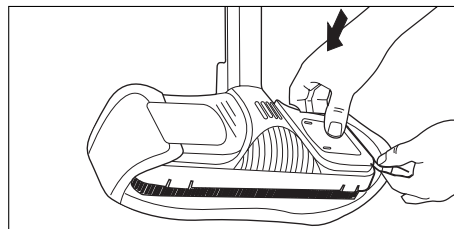

Floor nozzle

The floor nozzle is used for the cleaning of large, washable walls and floor areas. The floor nozzle can be used with or without the cloth cover.

 
- Sensitive surfaces, wood, linoleum etc. should be used with the cloth.

- The cleaning power of the cloth can be optimised by turning and changing the cleaning cloth regularly.
- To clean very dirty areas, move the cleaning nozzle over the surface more slowly in order to increase the cleaning action of the steam.

WARNING: The cleaner is not suitable for cleaning unsealed wooden floors, laminates, soft plastics or wooden furniture. If in doubt check with the flooring manufacturer.

Accessory adaptor


- 1 Push the jet nozzle adaptor as far as it will go onto the connection nozzle until you hear it click into place.

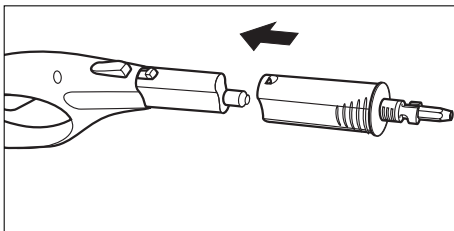

- 2 The jet nozzle adaptor can be removed again by pressing the accessory connection button to release it.

Jet nozzle

 - 1 Push the jet nozzle directly onto the jet nozzle adaptor and turn in a clockwise direction to lock into place.

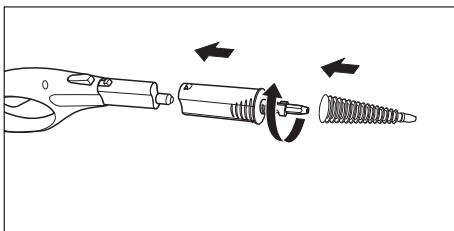


- 2 It can be used with various fittings, angled nozzle small and large brush attachments, depending on the task.

- The jet nozzle can be used with various fittings for cleaning inaccessible areas such as corners, joints, blinds, radiators and toilets as well as various surfaces such as stainless steel, windows, mirrors, enamelled surfaces and also for stain removal.

Brush attachment

 - 1 Choose the desired brush attachment for the task.

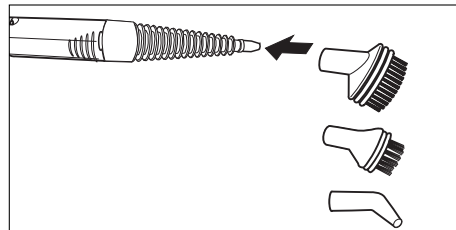


- 2 Fit the brush attachment onto the jet nozzle by pushing on.

- 3 Pull to remove.

IMPORTANT: Do not use the brass brush on grouting or delicate surfaces. Always test a hidden area before using steam on any surface.

Upholstery attachment

 - 1 Fit the rectangular upholstery steam nozzle to the jet nozzle adaptor by pushing on and turning clockwise to lock.
- 2 This nozzle can be used with or without the cotton cover.
- 3 Turn anti-clockwise and pull to remove.

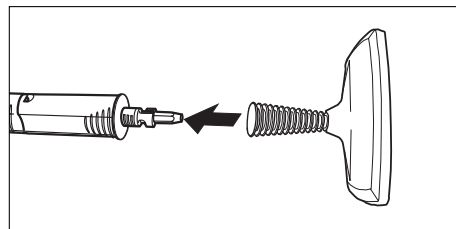


- This nozzle is ideal for cleaning cushions, carpets and car seats.

IMPORTANT: Always test on a hidden area before you start. Steam cleaning may not be suitable for certain fabrics such as dralon due to the high temperature of the steam.

Window attachment

 - 1 Locate the window squeegee onto the two tabs at the bottom of the upholstery nozzle. Then push the top of the squeegee until the clip goes over the top of the upholstery nozzle.

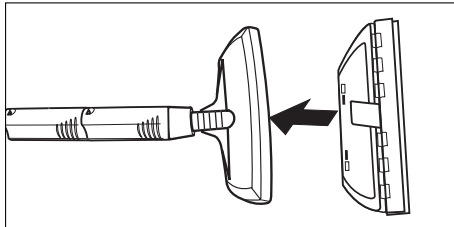


- This attachment is ideal for cleaning windows, mirrors, ceramic tiles and other non porous smooth surfaces.
- Apply the steam evenly to the glass surface from a distance of 10-15 cm. Then switch the steam off and wipe the moisture off the glass from top to bottom using the rubber squeegee. Wipe the rubber squeegee and the lower edge of the window. Dry after every strip.

WARNING: Glass surfaces can be shattered by the sudden application of excessive heat. Warm glass surfaces first from a distance of 20-25 cm. Continue at a distance of 10-15 cm.



Tube park

 - During use the tubes and nozzle can be stored in the park position for short breaks whilst cleaning. (Only with the cart fitted).

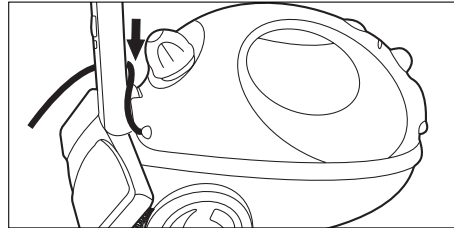

Tool storage

  
- The accessories for your steam cleaner can be neatly stored in the cart beneath the main body of the cleaner. Press the button at the rear of the cleaner and lift the main body off to access the tools.

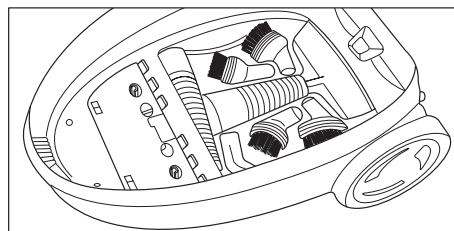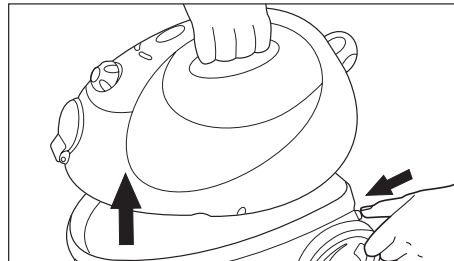


- When returning steam cleaner to the cart put hose inlet end 28 in first then with a firm downward motion push till the button at the back of cart goes in then out, a click will be heard.

After use

 - 1 Switch the cleaner off and unplug from the socket. Wait until the cleaner has cooled down completely.
- 2 Release any steam pressure by pressing the steam trigger on the handle

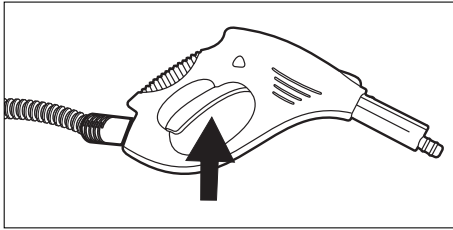

- 3 Apply the steam safety lock.

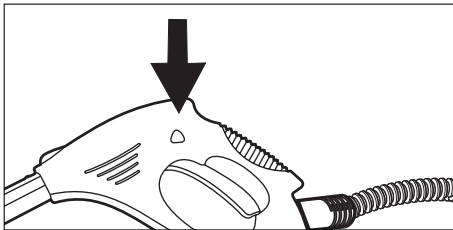 

- 4 Remove the filler cap.
- 5 Empty the water tank. Allow the inside of the water tank to dry out before replacing filler cap.

Rinse water tank

To clean the water tank fill it with clean water and shake vigorously. This will release any limescale deposits that have collected on the bottom of the tank. Pour the water out by holding upside down.

Descaling

In order to prolong the life of your cleaner you should descale the steam tank at least every 6 months.

 
- 1 Switch the cleaner off, unplug and allow to cool.
- 2 Empty any water out of the tank.
- 3 Mix the descaler in the measuring jug using warm water. We recommend using 50gm of citric acid crystals per 1 litre of water. Citric acid crystals are available from most pharmacies.
- 4 Pour 1 litre of the descaler solution into the tank.
- 5 Fit the cap and tighten fully.
- 6 Using the handle, move the steam cleaner about to swill the solution around the tank.
- 7 Leave for 30 minutes.
- 8 Empty the solution carefully.
- 9 Rinse the tank with clean warm water, then empty.
- 10 Wipe the outside of the cleaner with a damp cloth to remove all traces of descaler solution.

WARNING: Do not switch on the heater with the descaling solution inside.

Cord storage

There is a cord storage facility on the bottom of the cart. With the cleaner on its heel, pull-out the lower portion and rotate $\frac{1}{2}$ a turn. Pull the latch in the centre downwards to let the upper portion to move out. Wrap the cable around the two hooks as shown. For quick release of the cable rotate the lower portion back $\frac{1}{2}$ a turn.

Note: Make certain cord storage is returned and latched to its original position before use.

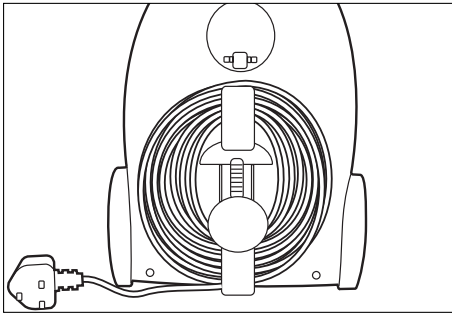

Care and maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over with a damp cloth will help maintain its good looks. Abrasive cleaners should not be used.

Purchasing parts

Use original parts. Replacement parts can be purchased from specialist retailers. If you have difficulty, call the number on the front of this booklet.

Helpline

If you have any difficulty with your appliance do not hesitate to call us. We are likely to be more help than the store from where it was bought.

Please have the following information ready to enable our staff to help you.

- Name of product
- Model number as shown on the underside of the appliance.



Your two year guarantee

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (1-5) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the plug and socket and check if the lights are illuminated.
- Check the attachments for blockages.
- Check the boiler for limescale.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on

the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example, the cleaner must have been regularly descaled.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 The guarantee excludes consumables such as the cloths.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

morphy richards®

The After Sales Division
Registered address
Morphy Richards Ltd, Mexborough
South Yorkshire, England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119